


## DIX - CONCERTINA

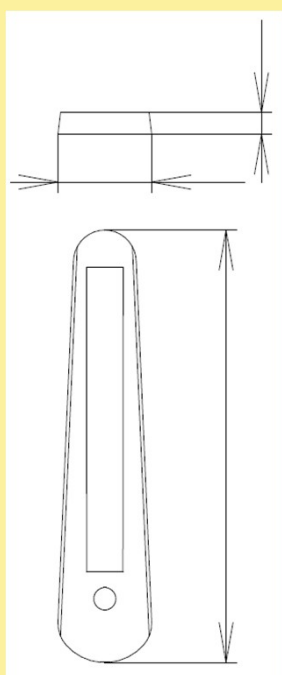

číslo destičky	Délka	Šířka	Tloušťka	Tón
Stimmplatte Nr.	Länge	Breite	Dicke	Ton
Reeds No.	Length	Width	Thickness	Tone
<b>1</b>	67,0	13,0	2	1H-cis
<b>2</b>	49,5	10,6	2	A-cis1
<b>3</b>	47,5	9,9	2	Ais-d
<b>4</b>	44,5	9,6	2	H-dis
<b>5</b>	42,0	9,1	2	c-g
<b>6</b>	40,5	9,0	2	d-cis1
<b>7</b>	39,0	8,8	2	d-gis1
<b>8</b>	37,5	8,7	2	fis-h1
<b>9</b>	35,0	8,5	2	dis1-c2
<b>10</b>	32,5	8,3	2	f1-f2
<b>11</b>	31,0	8,2	2	e1-a2
<b>12</b>	29,5	8,0	2	d2-c3
<b>13</b>	28,0	7,9	2	dis2-cis3
<b>14</b>	26,5	7,8	2	f2-f3
<b>15</b>	23,5	7,5	2	a2-c4